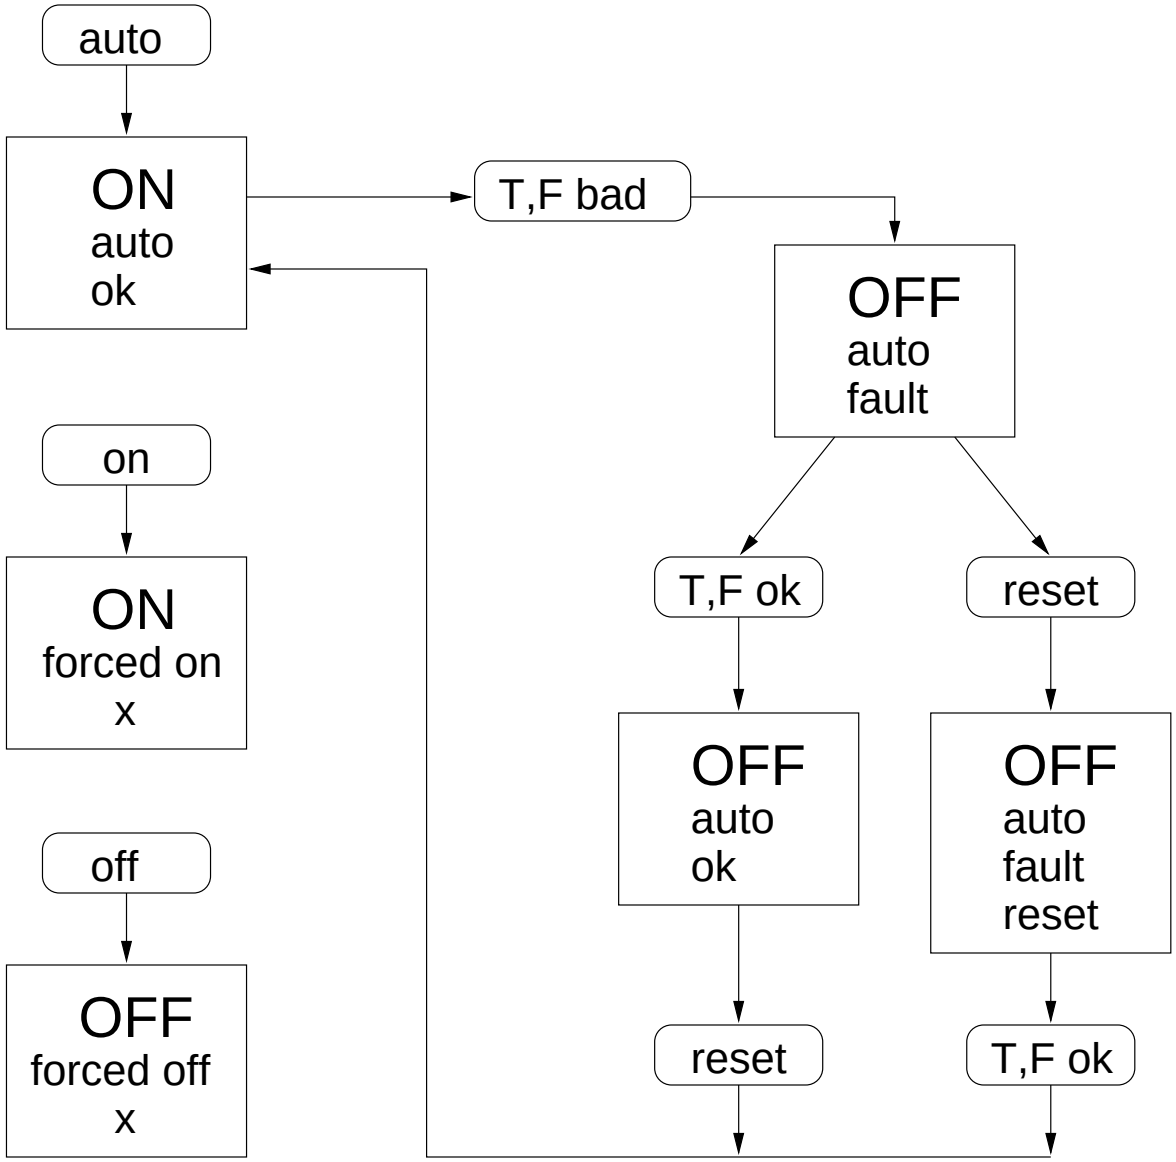
auto
ON
auto
ok
T,F bad
OFF
auto
fault
on
ON
forced on
x
T,F ok
reset
OFF
auto
ok
OFF
auto
fault
reset
off
OFF
forced off
x
reset
T,F ok